

ASi Slave for SEW Frequency Inverter, IP67, M12

ASi Slave for SEW Frequency Inverter

Easy triggering of fixed frequencies

M12 connectors

High protection class IP67



(figure similar)



Figure	Type	Drive ⁽¹⁾	Number of drives	Inputs digital	Outputs digital	Input voltage (sensor supply) ⁽²⁾	Output voltage (actuator supply) ⁽³⁾	ASi connection ⁽⁴⁾	ASi address ⁽⁵⁾	Art. no.
	IP67, 4 x M12	SEW MOVIMOT	1	2	–	out of ASi	–	ASi profile cable	1 single slave	BWU2912
	IP67, 4 x M12	SEW MOVIMOT	1	2	–	out of AUX	–	ASi using M12	1 single slave	BWU2956

- (1) **Drive:**
"SEW MOVIMOT®": Motor module to control motors with frequency inverters.
- (2) **Input voltage (sensor supply):** inputs are supplied by ASi or by AUX (auxiliary 24 V power). If supplied by ASi, inputs shall not be connected to earth or to external potential.
- (3) **Output voltage (actuator supply):** outputs are supplied by ASi or by AUX (auxiliary 24 V power). If supplied by ASi, outputs shall not be connected to earth or to external potential
- (4) **ASi connection:** the connection to ASi as well to AUX (auxiliary 24 V power) is made via yellow resp. black ASi profile cable with piercing technology or via M12 socket (in IP20 via clamps).
- (5) **ASi address:** 1 AB Slave (max. 62 AB Slaves/ASi network), 2 AB Slaves (max. 31 modules with 2 AB Slaves), Single Slaves (max. 31 Single Slaves/ASi network), mixed use allowed.
For modules with two slaves the second slave is turned off as long as the first slave is addressed to address "0".
Upon request, slaves are available with specific ASi Slave profiles.

Article no.	BWU2912	BWU2956
Interface		
Interface	RS 485	
Baud rates	9600 Bit/s	
Connection		
ASi / AUX connection	profile cable and piercing	M12 ⁽²⁾
Periphery connection	M12	
ASi		
Profile	S-7.F.E (ID1=1 fixed)	
Address	1 single slave	
Required Master profile	≥M3	
Since ASi specification	2.1	
Operating voltage	30 V (18 ... 31,6 V)	
Max. current consumption	165 mA	

ASi Slave for SEW Frequency Inverter, IP67, M12


Article no.	BWU2912	BWU2956
AUX		
Voltage	24 V (18 ... 30 V)	
Max. current consumption	1 A	
Input		
Number	2	
power supply	out of ASi	out of AUX
Sensor supply	short-circuit and overload protected according to EN 61131-2	
Supply of attached sensors	120 mA	
Switching threshold	< 5 V (low) > 15 V (high)	
Visualization		
LED I1, I2 (yellow)	state of input I1, I2	
LED M1 (yellow)	RS 485 communication active	
LED ASi (green)	on: ASi voltage flashing: ASi voltage on, but peripheral fault ⁽¹⁾ or address 0 off: no ASi voltage	
LED AUX (green)	on: 24 V _{DC} AUX off: no 24 V _{DC} AUX	
LED FLT (red)	on: Slave offline flashing: peripheral fault ⁽¹⁾ off: Slave online	
Environment		
Applied standards	EN 61000-6-2 EN 61000-6-4 EN 60529	
Operating altitude	max. 2000 m	
Ambient operating temperature	-30 °C ... +55 °C	
Storage temperature	-40 °C ... +85 °C	
Housing	plastic, for DIN rail mounting	plastic, for screw mounting
Protection category	IP67	
Pollution Degree	2	
Tolerable loading referring to humidity	according to EN 61131-2	
Max. tolerable shock load	30g, 11 ms, acc. EN 61131-2	
Max. tolerable vibration stress	5 ... 8 Hz 50 mm _{pp} /8 ... 500 Hz 6g, acc. EN 61131-2	
Isolation voltage	≥500 V	
Weight	100 g	
Dimensions (B / H / T in mm)	45 / 80 / 42	45 / 116,5 / 47,5

(1) See table "Peripheral fault indication"


(2) Line protection:

If the module is supplied via a M12 connection with A or B coding, it may only be used with a current load of max. 4 A per pin in acc. with IEC 61076-2-101 and IEC 61076-2-109. A fused tap is recommended. There is no such limitation for modules supplied via piercing contacts.

Connection to ASi and AUX via M12

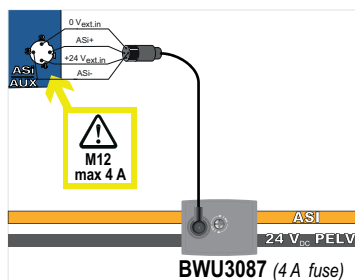

via piercing contacts

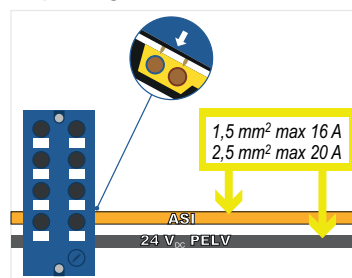

ASi Slave for SEW Frequency Inverter, IP67, M12

Article no.	Peripheral fault indication		
	Overload sensor supply	error in the inverter	communication error with the inverter
BWU2912	•	•	•
BWU2956	•	•	•

UL-specifications (UL508) BWU2912, BWU2956	
External protection	An isolated source with a secondary open circuit voltage of $\leq 30 V_{DC}$ with a 3 A maximum over current protection. Over current protection is not required when a Class 2 source is employed.
In general	UL mark does not provide UL certification for any functional safety rating or aspects of the above devices.

Article no.	Operating mode ⁽¹⁾	
	1 ramp with 14 speeds	2 ramps with 6 speeds each
BWU2912	•	• ⁽²⁾
BWU2956	-	-

(1) The ramps can be switched during operation.

(2) BWU2912 from Ident.No. ≥ 16859

Pin assignment

Signal name	Explanation
Ix	Digital input x
RS 485 TX +	Communication with motor, positive pole (labeling on motor RX +)
RS 485 TX -	Communication with motor, negative pole (labeling on motor RX -)
24 V _{ext out}	Power supply, out of external voltage, positive pole (AUX, actuator supply)
0 V _{ext out}	Power supply, out of external voltage, negative pole (AUX, actuator supply)
24 V _{ext in}	Input voltage, positive pole (AUX+)
0 V _{ext in}	Input voltage, negative pole (AUX-)
ASi+	ASi network, positive potential
ASi-	ASi network, negative potential
24 V _{out of ASi}	Power supply, out of ASi, positive pole (sensor supply)
0 V _{out of ASi}	Power supply, out of ASi, negative pole (sensor supply)
n.c.	not connected

ASi Slave for SEW Frequency Inverter, IP67, M12

Connections							
Article no.	M12 Connection	Marking	Pin1	Pin2	Pin3	Pin4	Pin5
BWU2912	X1	I1 (input 1)	24 V _{out of ASi}	n.c.	0 V _{out of ASi}	I1	n.c.
	X2	I2 (input 2)	24 V _{out of ASi}	n.c.	0 V _{out of ASi}	I2	n.c.
	X3	no connection (dummy plug)					
	X4	M1 (motor)	24 V _{ext out}	RS 485 TX -	0 V _{ext out}	RS 485 TX +	n.c.
	ADDR (dummy plug)	connection for ASi addressing device					

Connections							
Article no.	M12 Connection	Marking	Pin1	Pin2	Pin3	Pin4	Pin5
BWU2956	X1	I1	24 V _{ext out}	n.c.	0 V _{ext out}	I1	n.c.
	X2	I2	24 V _{ext out}	n.c.	0 V _{ext out}	I2	n.c.
	X3	no connection (dummy plug)					
	X4	M1	24 V _{ext out}	RS 485 TX -	0 V _{ext out}	RS 485 TX +	n.c.
	X5	ASi	ASi+	0 V _{ext in}	ASi-	24 V _{ext in}	-

Notice:

- The RS 485 bus address must be set directly on MOVIMOT. For further detailed information, please refer to the MOVIMOT documentation.
- The tap of the external 24V_{ext} has to be protected via a resetting fuse.

Accessories:

- ASi substructure module for 4-channel module in 45 mm-housing (art. no. BW2349)
- ASi substructure module (CNOMO) 4-channel module in 45 mm-housing (art. no. BW2350)
- Passive Distributor ASi/24 V to M12, 2 m line (article no. BW1974)
- Protection caps for unused M12 sockets (article no. BW2368)
- Passive Distributor ASi/AUX to 2 x M12 socket, internal protection via changeable 4 A slow-blow fuses (article no. BWU3087)
- It is recommended to use pre-assembled cables to connect the power source with the module e.g.:
 - Connction cable for SEW MOVIMOT AVT1, M12 cable plug, straight, 4 poles, A coded to M12 cabel socket, straight, B coded, cable length 2 m (BW4215)